Uniden®

BTSC1700

Bluetooth® Car Kit

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S **MANUAL**

What's In The Box?

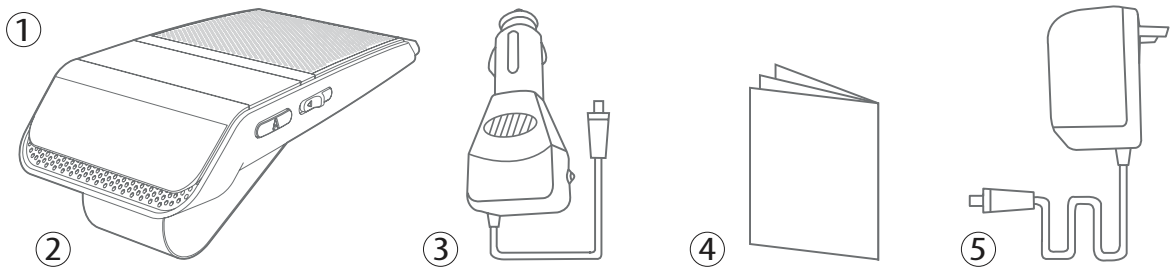

1. Carkit 2. Visor Clip 3. Car charger 4. Owner's Manual 5.AC Adaptor

Getting to Know the BTSC1700

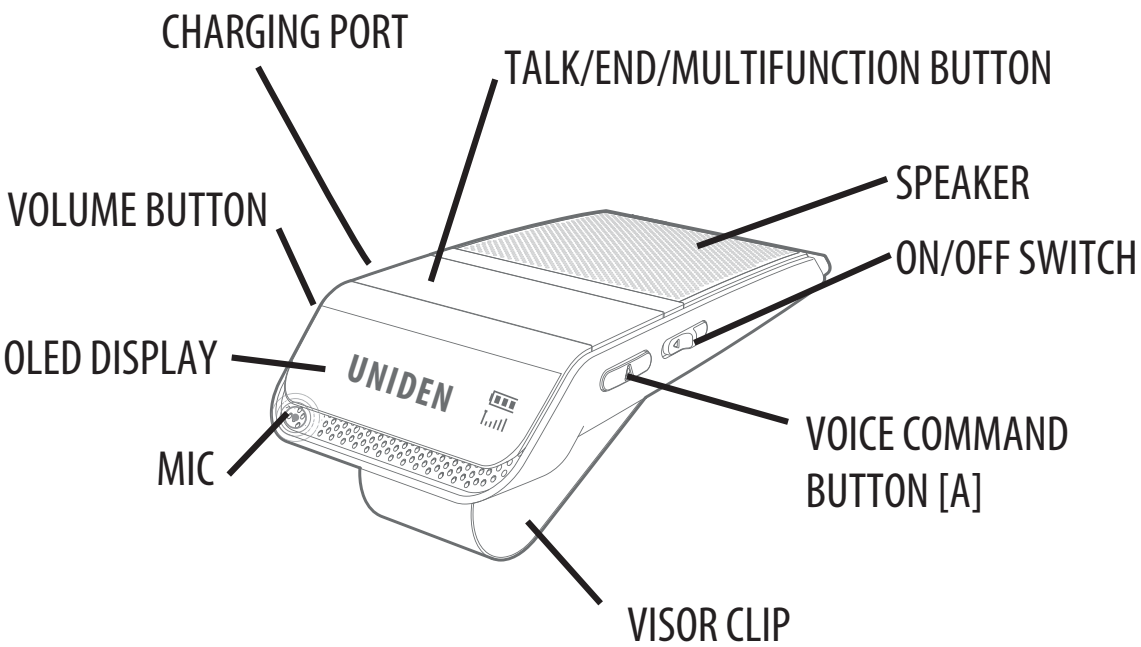

Charge the Battery

Connect an adapter to the charging port of the BTSC1700 and plug it into automobile (or any standard 12V~24V) or home power outlet. When charging is completed, charging indication OLED will be turned off .

[NOTE] Please use supplied power adaptor only.

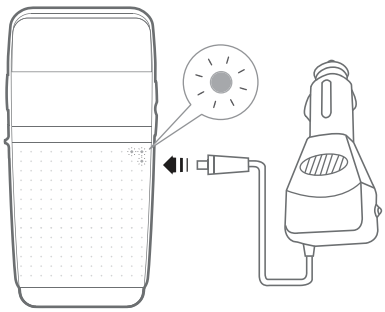

■ Low Battery Alarm

When the battery is low, the BTSC1700 will sound a beep alarm every 30sec. Once you hear the alert, please charge immediately. It will turn off in about 10 minutes if not recharged.

■ OLED Display

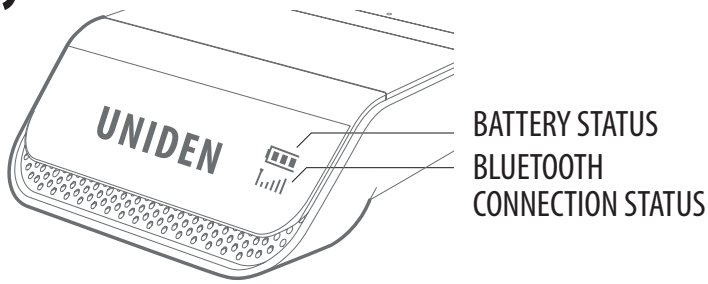

[NOTE] OLED screen will be turned off 30sec. after your last action. You can turn on OLED screen by touching any button.

Using Your BTSC1700

Turning ON/OFF

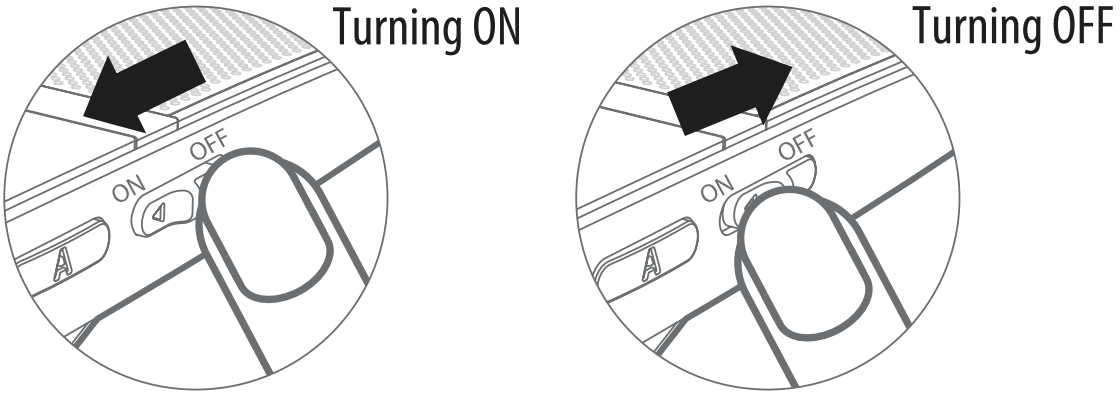

Using the Voice Command Mode

Voice commands listed in the table are available when Voice Command mode is activated.

Voice Command mode is activated automatically on an incoming call. To activate Voice Command in standby mode: Press the Voice Command button. Voice commands can be made after “Say Command” is announced.

[NOTE] Voice Command mode is cancelled when the Voice Command button is pressed again or when the BTSC1700 is turned off.

Voice Command	Explanation
“PAIRING MODE”	Device will go to pairing mode
“ANSWER”	Answer the incoming call.
“CHECK”	Check received E-mail & SMS .
“IGNORE”	Reject calls, check E-mail & SMS as you receive them.
“CHECK message”	Check the last received text message. The BTSC1700 will read it out.
“CHECK E-mail”	Check the last received E-mail. The BTSC1700 will read out the sender & title only.
“CHECK schedule”	Check today’s schedule (updated from your Google Calendar ™)
“CHECK weather”	Check today’s weather.
“What can I say?”	Check list of available commands.

■ “CHECK” Commands are only available if you install the “Uniden BTSC1700” application on your mobile phone and set up details. For details refer to the Uniden BTSC1700 Android ™ Application section on page 8.

Pair The BTSC1700 To Your Mobile Phone

■ Full Automatic Pairing

1. Set your mobile phone to Bluetooth discoverable mode (visibility on).
2. Turn the BTSC1700 on. When turned on for the first time it will go to pairing mode.
3. Place your mobile phone near to (within 10cm) the BTSC1700 for optimal result.
4. When the connection confirmation message appears on your mobile phone, confirm it. PIN number "0000" (4 zeros).

[NOTE] Please make sure that your mobile phone supports Bluetooth version 2.1 or higher version. This feature is only available when you pair for the first time. If not, please reset your unit (see page 15) and try again.

■ Voice Pairing

1. Turn on the BTSC1700 and press the voice command button.
2. After "Say Command" is announced please say "PAIRING MODE".
3. Set your mobile phone to search for Bluetooth devices.

• For the most mobile phones, you can find Bluetooth mode by selecting Setting/Tools - Connections – Bluetooth. (For further information, please refer to your mobile phone's manual)

4. When your mobile phone finds the BTSC1700, confirm it by selecting YES or OK. PIN number "0000" (4 zeros)

■ Auto Connection

The BTSC1700 supports auto connection. And it will try to re-connect to the last connected mobile phones when you turn on the BTSC1700.

Caller Name Announce & Display

When there is an incoming call, the BTSC1700 will announce & display the caller's name.

[NOTE] For this function, you should download phonebook data from your phones to the BTSC1700. If you do not download phonebook data, the BTSC1700 will announce & display caller's number only.

Phonebook Download

You can manually download phonebook. Please press volume up (+) button for 3 seconds. Then the BTSC1700 will start to download phone book data from your mobile phone automatically.

It will take more than 1min. or more based on your phone book data size.

[NOTE] To cancel phonebook download, press Volume down (-) button for 3 seconds.

[NOTE] Phonebook Download is available only for mobile phones that have the PBAP profile.

Uniden BTSC1700 Android ™ Application

If you have an Android™ capable mobile phone, then you can check E-mail, SMS, today's schedule & weather with this free application. Go to the Android ™ market and search "Uniden BTSC1700". Download and install it on your mobile phone and activate. Once you install it, please go to the setting menu and check the services you desire.

[NOTE] To use the BTSC1700 Application properly, preset your mobile phone to enable synchronisation (see page 9-12).

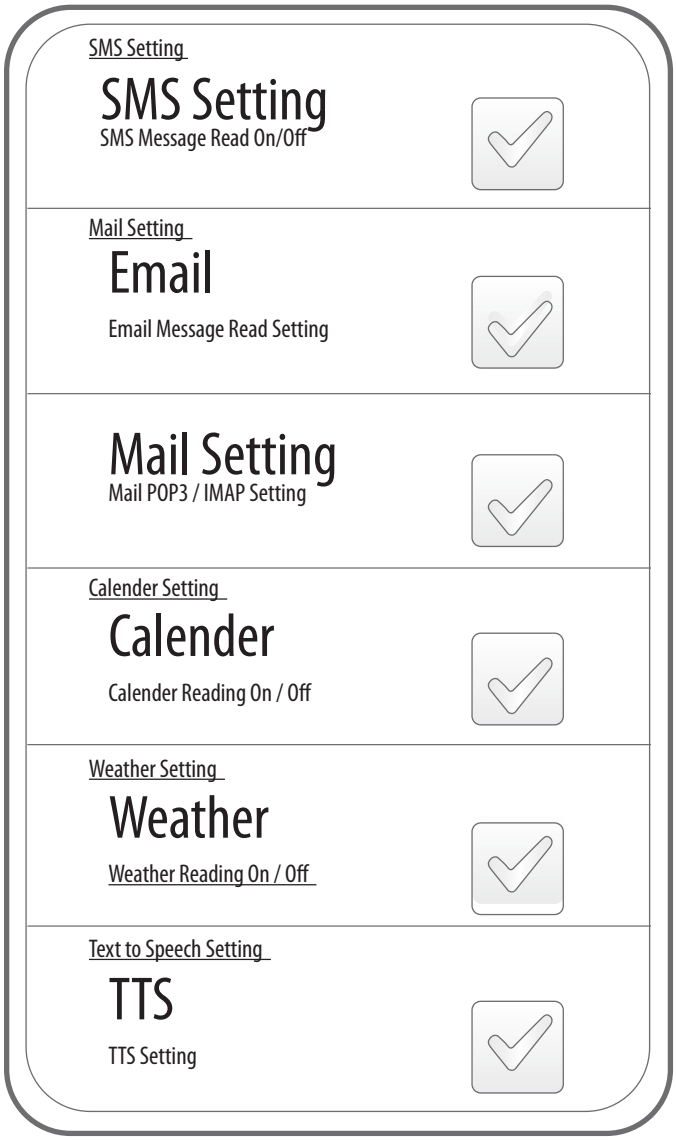

This service is powered by Google TTS. Currently available languages are; UK/US English, French, Spanish, Germany and Italian.

How to Synchronize the BTSC1700 Application with your Mobile Phone

[NOTE] Once you connect the BTSC1700 to your mobile phone, the Android Application shows automatically.

1. MOBILE PHONE SETTING

• TTS (Text to Speech) Activation

Please activate the TTS option on your mobile phone before using the Application. Refer to your mobile phone instructions if necessary.

1. Go to Settings on your mobile phone.
2. Enter the Voice input & output menu.
3. Activate the TTS option & Choose the language you want.

[NOTE] If your mobile phone is not set up for Voice data, please click <Install voice data> first to use the TTS (Text To Speech) Function.

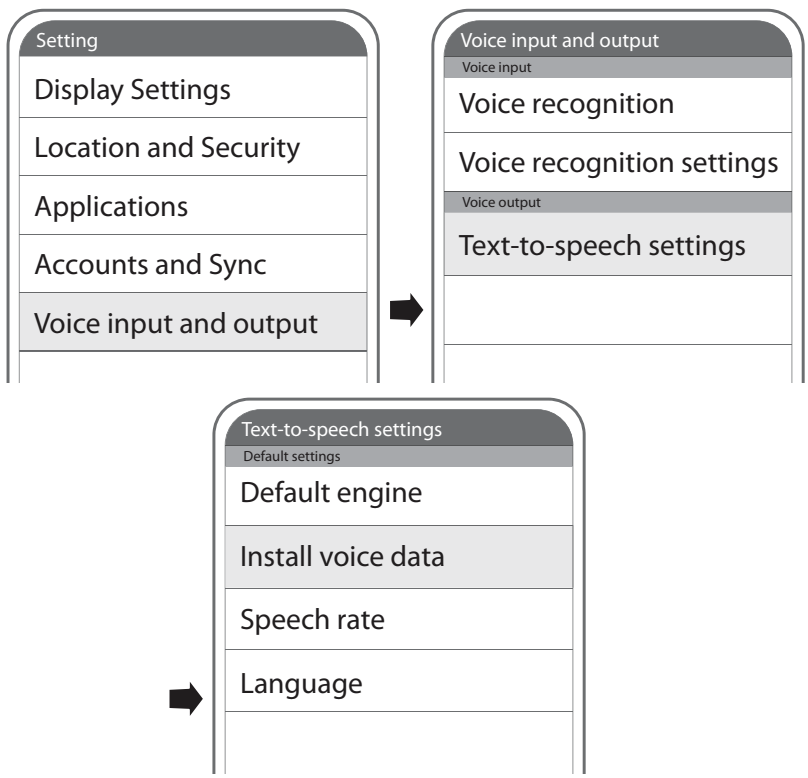

• Weather TTS

In order to obtain Weather information, your phone must be ready to receive Location information.

1. Go to the setting menu on your mobile phone.
2. Enter the Location and Security menu
3. Check one of either; <Use wireless networks> or <Use GPS satellites>

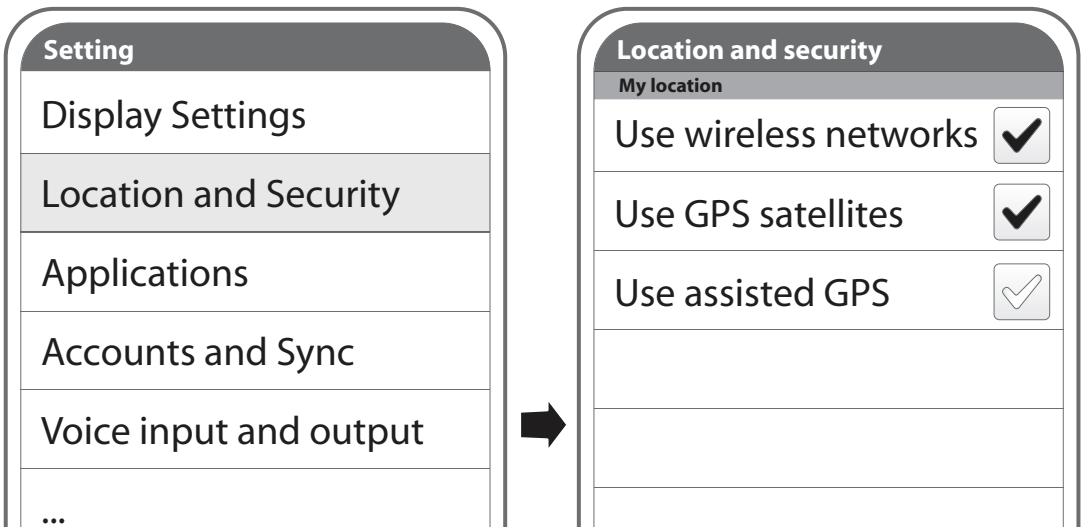

• Schedule (Calendar) setting

To synchronize your Google schedule with the BTSC1700 Application, you must check the option as follows;

1. Go to the Account and Sync setting menu on your mobile phone.
2. Choose your E-mail account.
3. Check the <Sync Calendar> box.

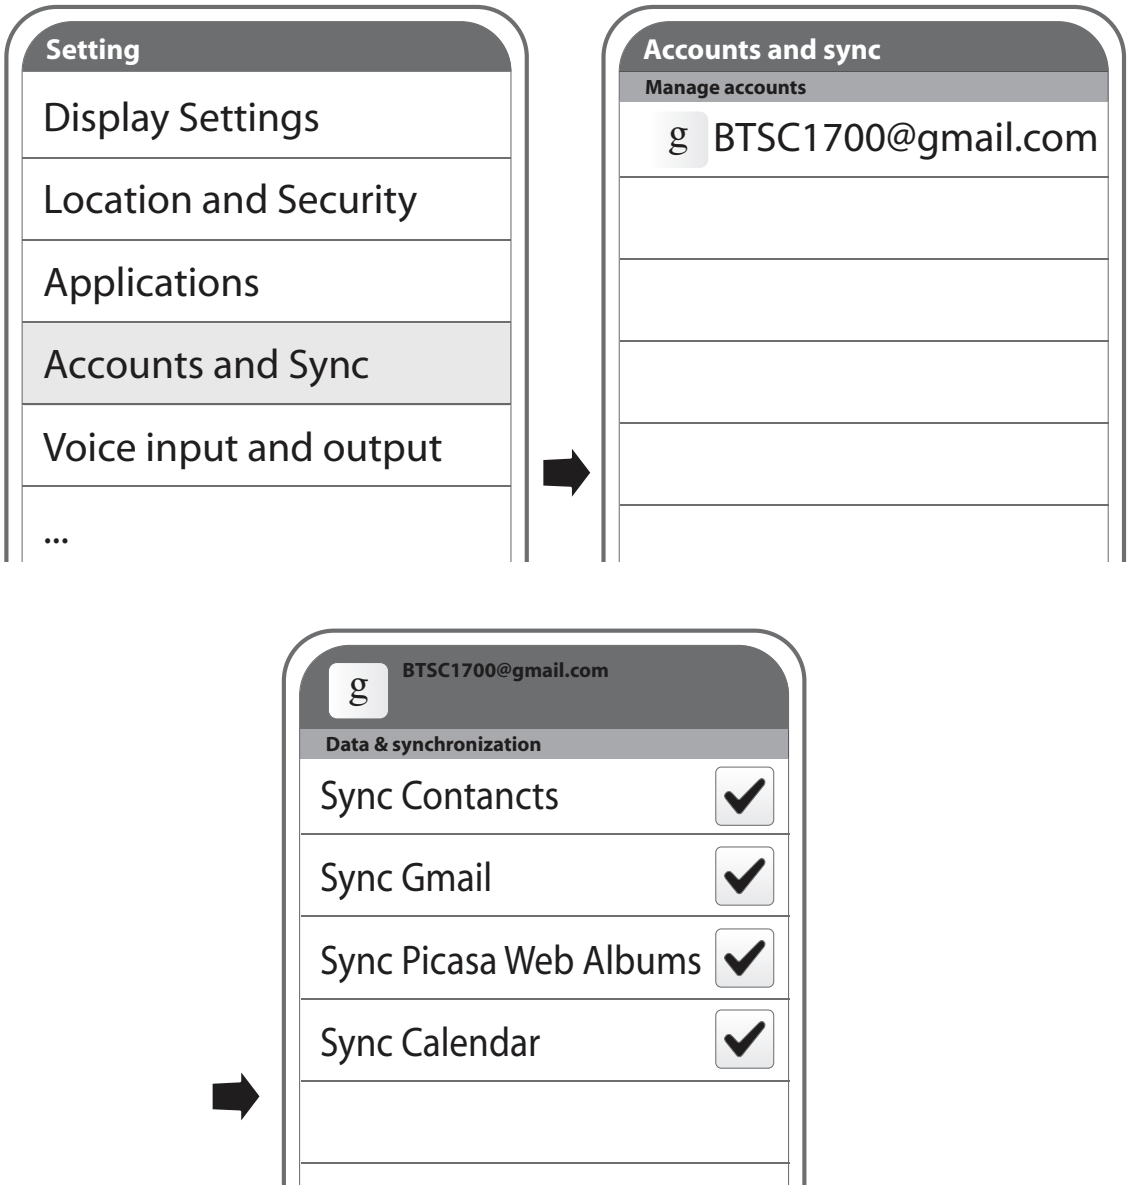

2. BTSC1700 Application Setting

• E-Mail setting

1. Check the E-mail option box.
2. Enter the mail settings menu and enter the mail server settings of the account.

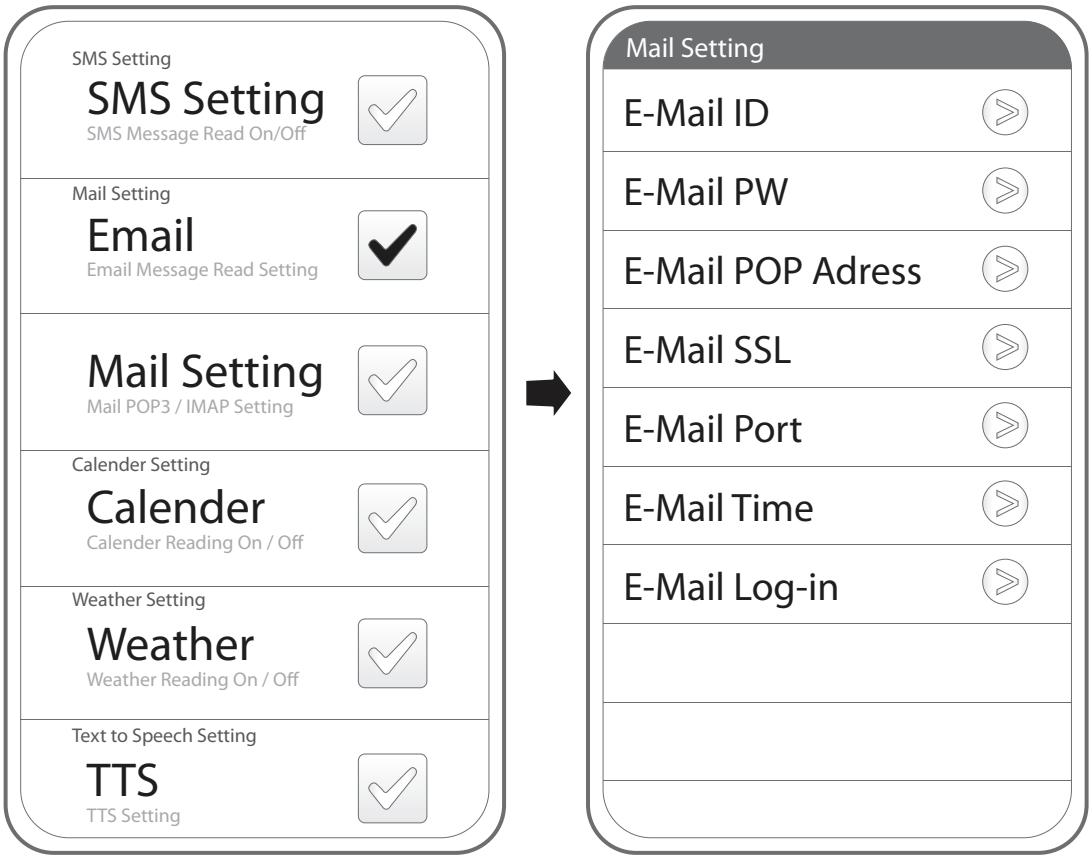

[NOTE] To activate the E-mail TTS function, you must enter your E-mail account information again on the BTSC1700 Application, even if you have already set up your E-mail account on your mobile phone. For details of the setting method, please refer to the mail server settings instruction of your e-mail account.

Making and Receiving Calls

Making A Call

1. Last call-Redialing
   Press the Multi-Function button.
2. Voice Dialing
   Press the Multi-Function button for 1 second until you hear a beep sound, then voice dialing is activated on the BTSC1700. If you want to cancel voice dialing, press the Multi-Function button for 1 second during the voice dial Mode.

[NOTE] Please make sure that your phone supports the voice dialing feature. (See your phone's manual for detailed instructions)

Receiving A Call

When you receive phone calls, the BTSC1700 will announce "PLEASE SAY ANSWER or IGNORE". Say "ANSWER" to take the call. You can take the call at any time by pushing the multifunction button.

Rejecting A Call

When you receive phone calls, the BTSC1700 will announce "PLEASE SAY ANSWER or IGNORE". Say "IGNORE" to reject the call. Or press the Multi-Function button for over 1 second.

Ending A Call

Press the Multi-Function button during the call or just press the “End” button on the phone.

Transferring A Call

To transfer a call from the BTSC1700 to your mobile phone and vice versa, press the Multi-Function button on the BTSC1700 during the call for 1 second until you hear a beep.

Adjusting The Volume

You can adjust the volume by pressing the volume up (+) or down (-) button during the call.

Mic Mute

If you press the Volume down (-) for 1 sec., the microphone will be muted and you will hear a beep every 10 seconds during the mute mode.

[NOTE] The MIC mute mode can be deactivated by pressing Volume down (-) for 1 sec. again.

Call Waiting

To activate call waiting function, you must subscribe to call waiting through your service provider, and your phone must support the hands-free profile.

1. To put your current call on hold and switch between the two calls, press and hold volume up (+) for about 3 seconds. When you release the button, you'll be connected to the waiting call.
2. To hang up your current call and switch to the waiting call, press and hold volume down (-) for about 3 seconds. When you release the button, you'll be connected to the waiting call.

[RECOMMENDED] Press the "SEND" button of your mobile phone to activate the call waiting function.

[NOTE] Some features may not be compatible with certain mobile.

Inverting The OLED Display

To reverse the OLED display, please press both Multi-Function button and Volume up (+) button for 3 seconds.

Resetting The BTSC1700

Press and hold Multi-Function button and volume down(-) button simultaneously for 3 seconds until you hear 2 rings. Then all information in the BTSC1700 will be deleted.

[NOTE] Resetting is only possible when in standby mode after disconnecting with your mobile phone.

Multipoint: Using The BTSC1700 With Two Phones

[NOTE] Some mobile phones are not available for Multipoint.

1. Multi-point Connect
   - Set the handsfree unit into pairing mode first. After then search BTSC1700 from each mobile phones at the same time.
   - Please connect first mobile phone. Once the connection is completed, please connect the second mobile phones.

[NOTE] Some mobile phones need to perform the connection process at the same time.

2. Making a call [via the second mobile phone]
   - Press the Multi-Function button twice shortly for last call-redialing from the second mobile phone.
   - Press the Multi-Function button for about 3 seconds to activate the voice dialing of the second mobile phone.

[NOTE] Making a call via the first mobile phones, please follow the same instruction as described on "MAKING A CALL".

3. Receiving a call
   Please use the general rule as you receive calls

[NOTE] Each mobile phone plays different ring tones.

GPS Guide

If your mobile phone has GPS navigation guide then you can listen to the guide through the BTSC1700. To activate this feature, please make sure your mobile phone supports the A2DP profile.

Specifications

Model Name	BTSC1700
Bluetooth Core Spec	Bluetooth Specifi cation 3.0
Profile	HSP, HFP, A2DP, PBAP, SPP
Carrier Frequency	2402 MHz to 2480 MHz
Audio Output	2W (4Ω)
Modulation Method	GFSK, 1Mbps, 0.5BT Gaussian
Maximum Data Rate	Asynchronous: 2178.1 kbps / 177.1 kbps Synchronous: 1306.9 kbps / 1306.9 kbps
Bluetooth Class	Class 2
Hopping	1600 hops/sec, 1MHz Channel Space
Transmit Power	0 dBm
Coverage Range	10 Meters
Receiver Sensitivity	-80 dBm / 0.1 % BER
Continuous Talk Time	Max. 15 Hours
Standby Time	400 Hours
Charging Voltage	DC 5.0 V
Charging Time	3 Hours
Operating Temperature	-20° to +70°C
Storage Temperature	-40° to +90°C
Battery	Lithium Polymer 3.7V 700mAH

SAFETY AND GENERAL INFORMATION

1. Please read this manual carefully and follow the instructions.
2. To avoid any damage or malfunction of the unit, do not drop it from a high place.
3. Keep unit away from humidity, water and any other liquid. If the unit is exposed to water, moisture and other liquid directly, then do not operate it to avoid any electrical shock, explosion or damage to the unit.
4. Do not place or keep the unit near heat sources such as direct sunlight, radiators, stoves or other apparatus which produce heat. It may cause explosion, degrade performance and reduce battery life.
5. Do not modify, repair or disassemble the unit (especially battery: it may cause an explosion).
6. Do not place heavy objects on the unit.
7. Use only the supplied approved car and AC charger.
8. Replacement or service must be done at a qualified service center or manufacturer.
9. Unplug this unit when unused for long period of time or during lightening storms.

[CAUTIONS] ELECTRIC SHOCK HAZARD The battery used in this device may present a risk of fire or chemical burn if mis-treated.

Two Year Limited Warranty

UNIDEN BTSC1700 Bluetooth Wireless Speaker

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 ("Uniden Aust") or Uniden New Zealand Limited ("Uniden NZ") as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the BTSC1700 ("the Product"), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire two (2) years from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

(A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner's Manual;

(B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;

(C) Improperly installed contrary to instructions contained in the relevant Owner's Manual

(D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or

(E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden®

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in PRC